


Quick Start

Be advised that it is safe practice to power the Glo-Pole on in the following order:

1. Gently insert the power adapter into the "Micro USB Charge Port" receptacle on pole.
2. Plug power adapter into wall outlet or surge protector/power strip.*
3. Press power button on pole directly opposite of the power input receptacle using the included Push Pin (the 1/8th jack attached to the Cotterless Hitch Pin, Fig A).
4. Insert Cotterless Hitch Pin through Lighted Pole frame for desired height. (66lb. max)
*5 hours of run time on single charge

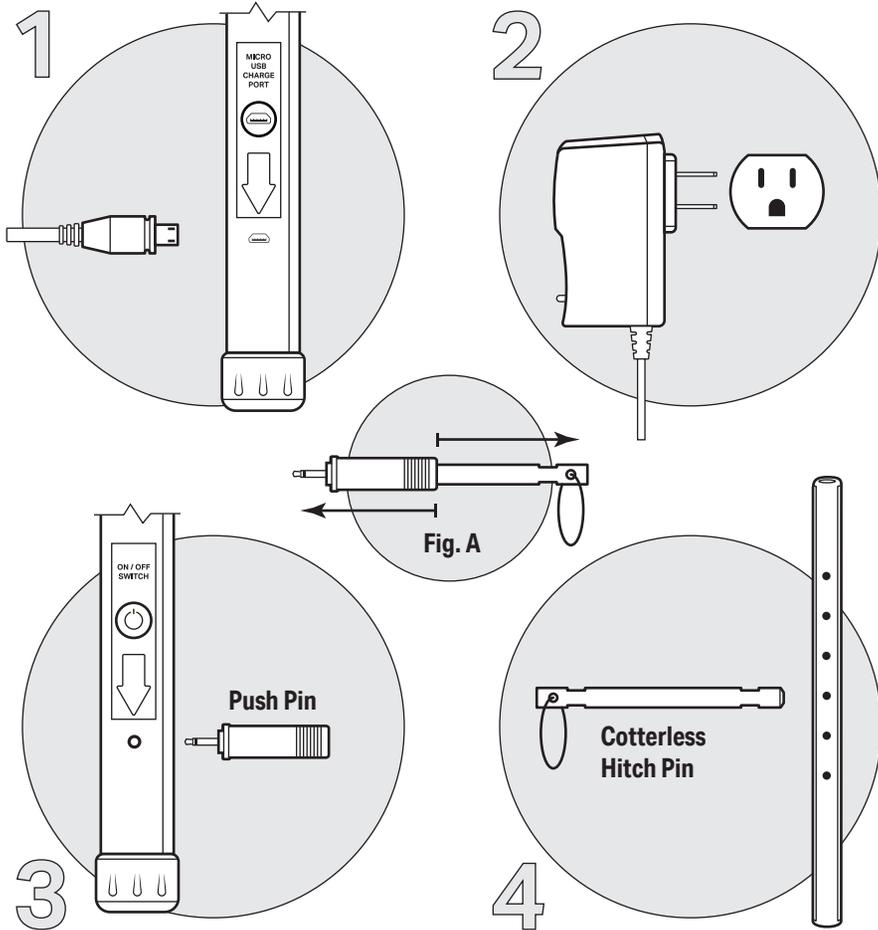


Please do not return to the retailer if you are having a technical issue operating or connecting the unit. Our team is here to help, M-F, from 9-4 Pacific at: **800-678-5348**

VOCOPRO.COM

Quick Start

Be advised that it is safe practice to power the Glo-Pole on in the following order:

1. Gently insert the power adapter into the "Micro USB Charge Port" receptacle on pole.
2. Plug power adapter into wall outlet or surge protector/power strip.*
3. Press power button on pole directly opposite of the power input receptacle using the included Push Pin (the 1/8th jack attached to the Cotterless Hitch Pin, Fig A).
4. Insert Cotterless Hitch Pin through Lighted Pole frame for desired height. (66lb. max)
*5 hours of run time on single charge

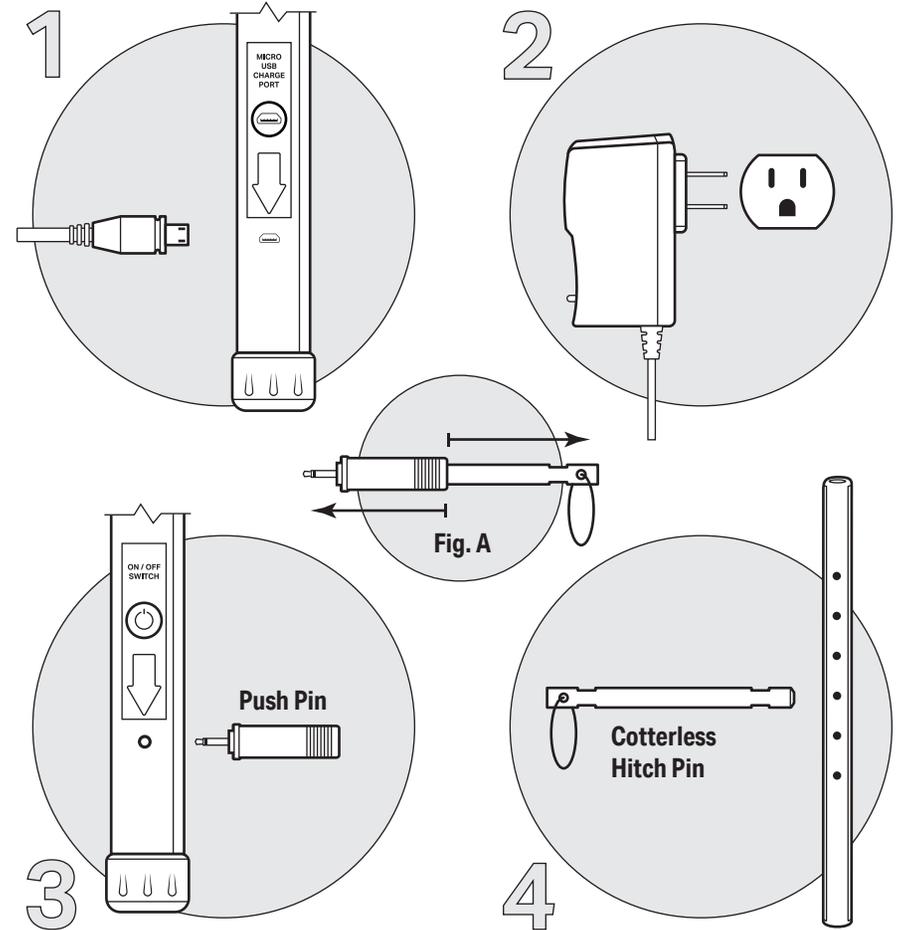

Please do not return to the retailer if you are having a technical issue operating or connecting the unit. Our team is here to help, M-F, from 9-4 Pacific at: **800-678-5348**

VOCOPRO.COM