


# ***Pop-Up Oke***

## ***User Manual***


---

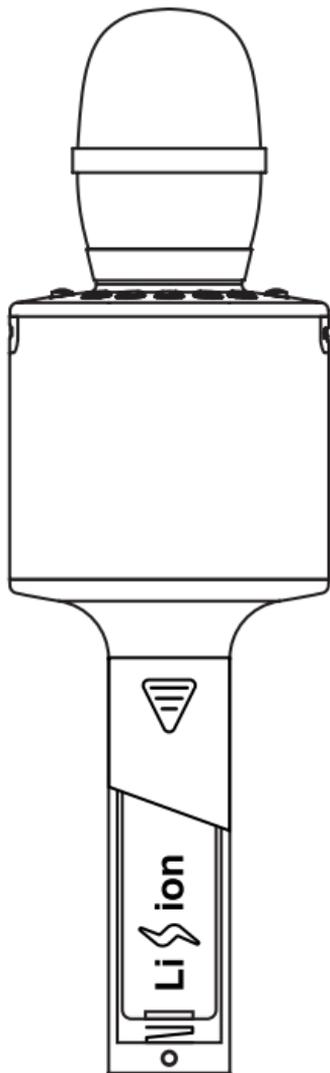

### ***What's inside the box***

- **Pop-up Oke:**  
All-in-one Wireless karaoke microphone with light show speaker
- **USB Charging Cable**
- **Rechargeable battery\***

\*Microphone ships with battery pre-installed

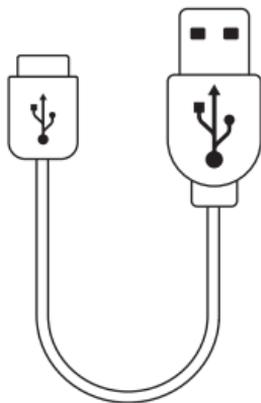

## ***Technical Specifications***

---

- Microphone: Condenser
- Output Power: 5W
- Frequency Range: 100Hz-10KHz
- Maximum Sound Pressure Level:  
    >115dB 1KHz THD<1%
- Battery Type: User-Replaceable  
    Lithium ion rechargeable (18650)
- Battery Capacity: 1500 mAh
- Charging Voltage: DC 5V

Note: As a continued effort to fine-tune our products, specifications may change without prior notice

## ***Features***

---

- New generation of wireless karaoke microphone
- All-in-one portable design perfect for small karaoke gatherings or road trips
- Innovative Music Link™ technology can link two Pop-up Oke to perform duets
- Seven color LED lights dance to the beat of the music with on/off switch
- Shock mounted professional condenser microphone to reduce handling noise
- User replaceable lithium ion rechargeable battery type 18650

## ***Getting Connected***

---

1. Install rechargeable battery.
2. Press the power button and look for a blue LED light.
3. Connect an audio source using wireless Bluetooth connection or micro SD/TF media card.
4. Press play on your Bluetooth streaming device (i.e. smart phone, tablet) or press play directly on the Pop-Up Oke when using a SD/TF card.
5. Adjust Mic and Echo volumes and sing away.

## ***Connecting via Bluetooth***

---

1. Hold Power button to turn Pop-up Oke ON.
2. Turn ON the Bluetooth search function of your smartphone or Tablet and select “Popupoke”.
3. There will be an audible confirmation once a successful connection has been made.
4. Press play on your Bluetooth streaming device (smartphone, tablet, etc).
5. Adjust all volumes.

\* If you are prompted to enter an access password when pairing, enter “0000”

## ***Music Link™***

This innovative technology allows you to link two Pop-Up Oke and perform duets.

### **First initial pairing:**

1. Power on one Pop-Up Oke and connect via Bluetooth.
2. Now power on another Pop-Up Oke.
3. Press Power button twice on the Pop-Up Oke that is currently connected via Bluetooth.
4. Both Pop-Up Oke will sound an identical audible chime to confirm link.

### **After initial pairing:**

1. Hold Power button to power on both Pop-Up Oke.
2. Place two Pop-Up Oke within close proximity to one another.
3. An audible chime will confirm that both Pop-Up Oke are now linked.
4. Connect via Bluetooth (see Connecting via Bluetooth pg 3).
5. Audio will now be streaming from both Pop-Up Oke speakers.
6. To disconnect Music Link™ feature, simply power off one of the Pop-Up Oke.

## ***Connecting Using micro SD/TF***

---

1. Insert an micro SD or TF media card that is no larger than 16Gb.
2. The Pop-Up Oke will automatically detect the card as the input source.
3. All control functions on the Pop-Up Oke will now apply to the micro SD/TF card.
4. Media file type accepted: MP3.

## ***How to Recharge Battery***

---

1. With the battery installed, connect micro USB contact into the Pop-Up Oke and the USB connector into a computer/laptop\* or wall outlet adapter.\*  
**\*Not Included**
2. A red LED light will illuminate indicating the Pop-Up Oke is charging.
3. The red LED light will go off or turn blue once charging is complete and battery is full.

## ***Features***

---

**MIC** **Slide to adjust** the microphone value to match the karaoke background music.

**▶▶|** **Next Track** (press) or **V+** Music volume up (press and hold).

## Features Continued

---

 **Play/pause** (press once) vocal eliminator (press and hold).

 **Previous track** (press once) **V-** Music volume down (press and hold).


 **Power/mode** - turn unit on/off (press and hold) switch between Bluetooth and memory card mode (press once).

 **Lights:** Turn light show on or off.

**ECHO** Adjust **Digital echo** for the mic.



**USB Charge**- this connector is the recharging port and requires a Micro USB to USB cable for battery recharging.

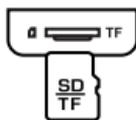

**Micro SD/TF CARD**- insert media card\* here for playing digital files. \*Card not included

**VE** **VE** (vocal eliminator)- press and hold to activate. Vocals will be greatly reduced on regular stereo recorded tracks (vocals recorded on center channel).

# ***Troubleshooting***

---

## **No charging LED**

Battery may be extremely low or completely dead. Please check that the charging cable is firmly connected.

## **No Light Show LED**

Make sure Pop-Up Oke has a sufficient amount of charge. Press the light button once to turn ON.

## **No Microphone Audio**

Turn Pop-Up Oke ON by pressing the power button. Battery may need to be recharged. Adjust the MIC VOL (+/-) fader.

## **Experiencing Noise Interruption**

This may be your cell-phone receiving an incoming message transmission. Please give a distance of about 3-5ft from any electronics or other microphones to limit the possibility of any interference coming through on the Pop-Up Oke.

## **Music Audio is Cutting Out**

If using a Bluetooth connection, bring your phone closer to the Pop-Up Oke because you may be a bit too far. Also, limit any obstacles

that may disrupt a solid line of sight connection. Adjust the volume of your audio input device and check that you have sufficient wifi connection if you are streaming songs from the internet.

### **Bluetooth Not Pairing**

Have your Bluetooth pairing device (smartphone, tablet, etc.) forget the Pop-Up Oke in the Bluetooth set-up menu and then re-attempt the pairing process steps listed in the getting connected section of this manual.

### **Vocal Eliminator Has No Effect**

Vocal eliminator will work the best if the songs are stereo and the vocals are recorded on the center of the right and left channel.

Vocal eliminator will NOT work on:

- Songs are recorded in Mono.
- Multiplex karaoke tracks (where vocal and music is recorded separately in an asymmetrical fashion with the vocals 100% to one side).

*If any other problem persists or if you have further questions, please feel free to call:*

VocoPro Tech Support at **800-678-5348**